

Base Temperature Probe



Installation Instructions

Included Parts


Description	Qty
Thermistor Probe w/ 7POS Mini-DIN 100K	1
Micromanometer	1
Installation Instructions	1

New Temperature Probe/ Micromanometer Installation


1. Locate and unplug custom cable and thermistor probe cord from meter display.



2. Pinch strain relief bushing and push through the base hole.

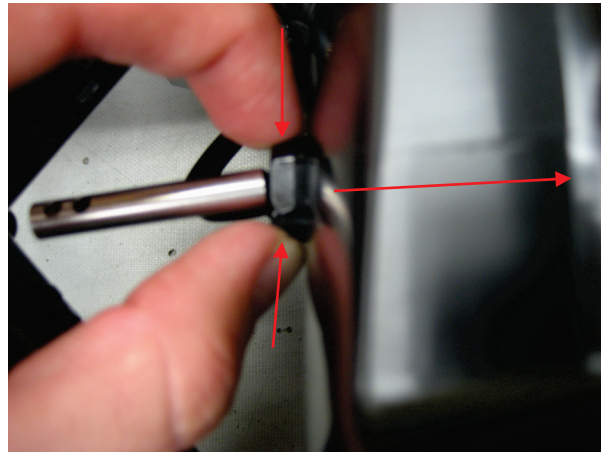


3. Open the strain relief bushing and remove the thermistor probe cord only.

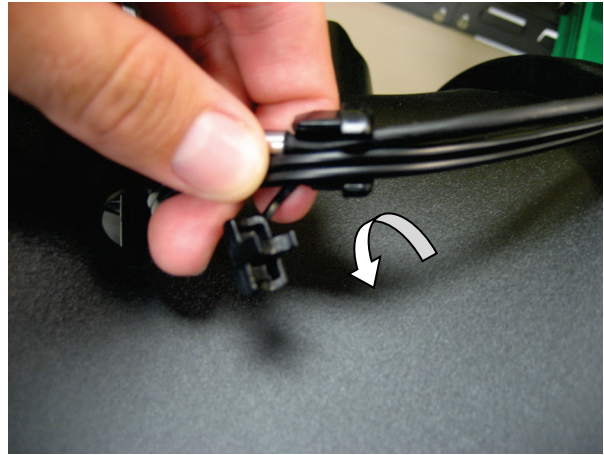

4. Locate new thermistor probe and insert it into the strain relief bushing.



5. Close the strain relief bushing and press through the base hole, snapping it into place.

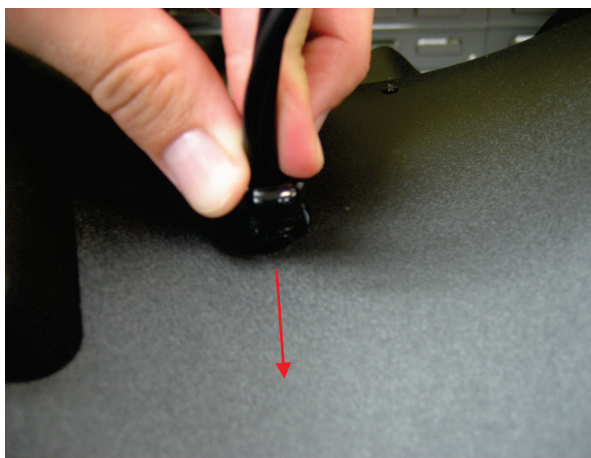

6. Locate the micromanometer and insert into the micromanometer port in the base.
Snap in to secure.



7. Locate custom cable and thermistor probe cord and insert them into their respective ports in the micromanometer.



Start Seeing the Benefits of Registering Today!

Thank you for your TSI® instrument purchase. Occasionally, TSI® releases information on software updates, product enhancements and new products. By registering your instrument, TSI® will be able to send this important information to you.

<http://register.tsi.com>

As part of the registration process, you will be asked for your comments on TSI products and services. TSI's customer feedback program gives customers like you a way to tell us how we are doing.

TSI and the TSI logo are trademarks of TSI Incorporated in the United States and may be protected under other country's trademark registrations.



Knowledge Beyond Measure.

TSI Incorporated – Visit our website www.tsi.com for more information.

USA Tel: +1 800 680 1220
UK Tel: +44 149 4 459200
France Tel: +33 1 41 19 21 99
Germany Tel: +49 241 523030

India Tel: +91 80 67877200
China Tel: +86 10 8219 7688
Singapore Tel: +65 6595 6388

